

Wireless Controller

1. PAIRING Plug power in and within 15 seconds press UP MIDDLE DOWN once in turn. The controller will beep. Pairing is successful. If it doesn't work disconnect power for 30 seconds and retry.
2. RESET Press DOWN until it cannot go lower, release it. Then press and hold DOWN. The mechanism travels to the bottom, raises up, then lowers down again. The controller will beep. Release the button. Reset is successful.

If this doesn't work try:

1. Turn off the power, wait 10 seconds
2. Power on and respectively press the up, middle, and down buttons within 5 seconds.

Wired Controller

Press DOWN until it cannot go lower, release it.

Then press and hold DOWN. The mechanism travels to the bottom, raises up, then lowers down again. The controller will beep. Release the button. Reset is successful.