

Check if the Power Light is on near the bottom of the front cover

## **MOTOR RESET**

With power on, on remote control:

1. Press-and-release down
2. press-and-hold down

A beep means success

## **CONTROL RESET**

With power on, on remote control:

1. press-and-release up
2. press-and-release middle
3. press-and-release down
4. press-and-hold the down

A beep means success