
VFM-DAD/5


vav.link/vfm-dad-5/

VISION


1

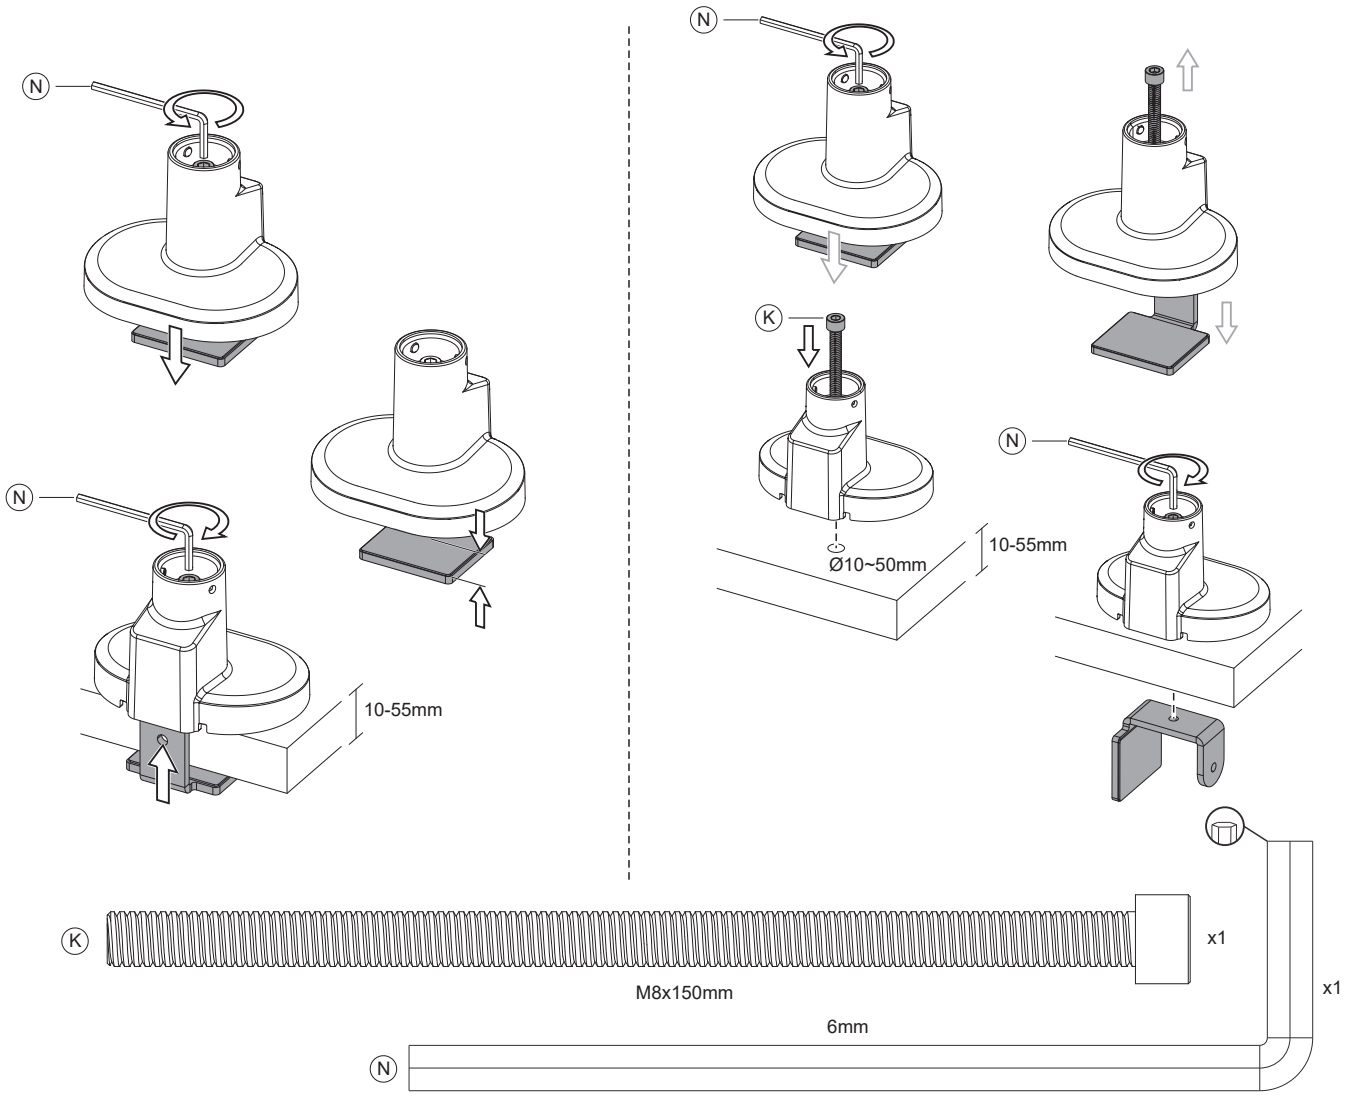


2

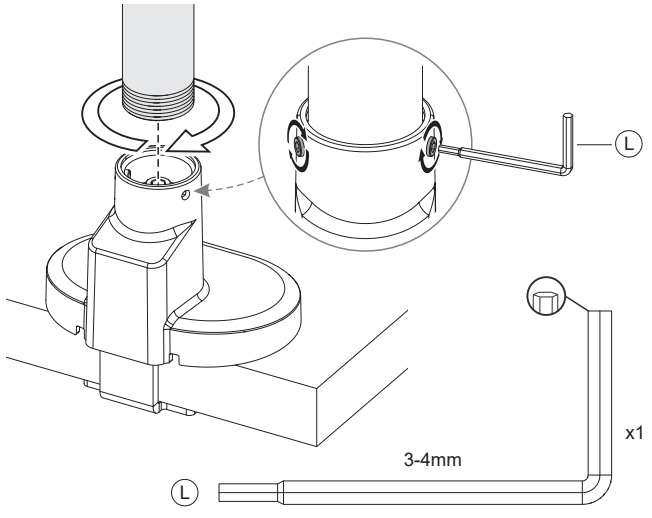


3

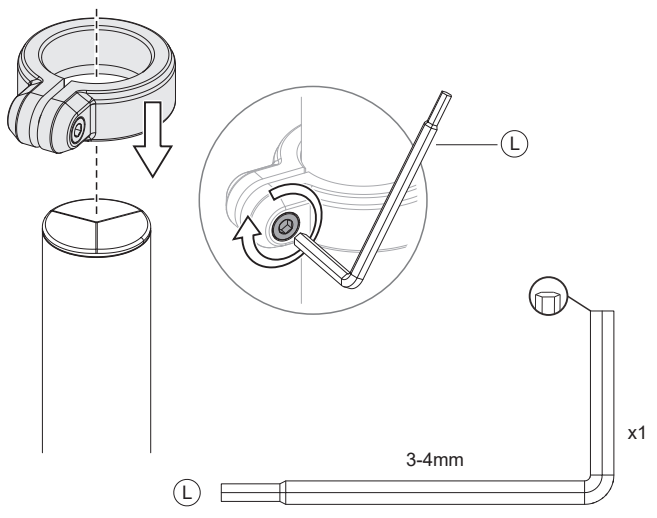


4

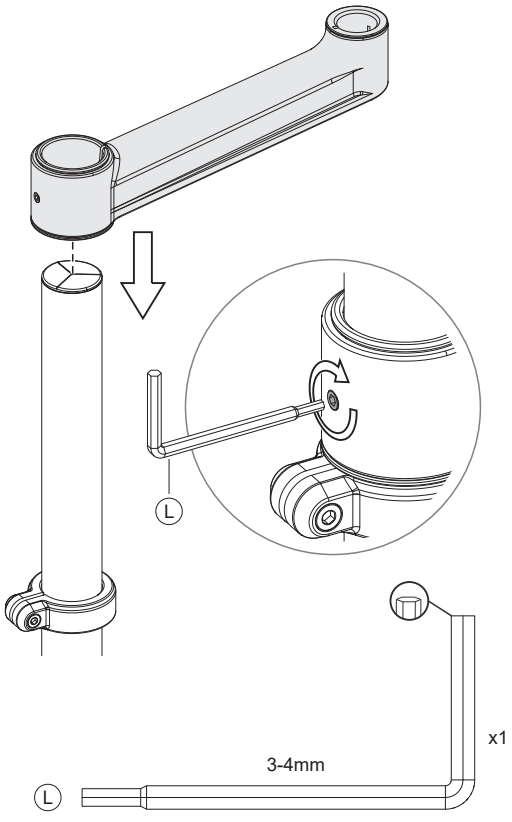


5

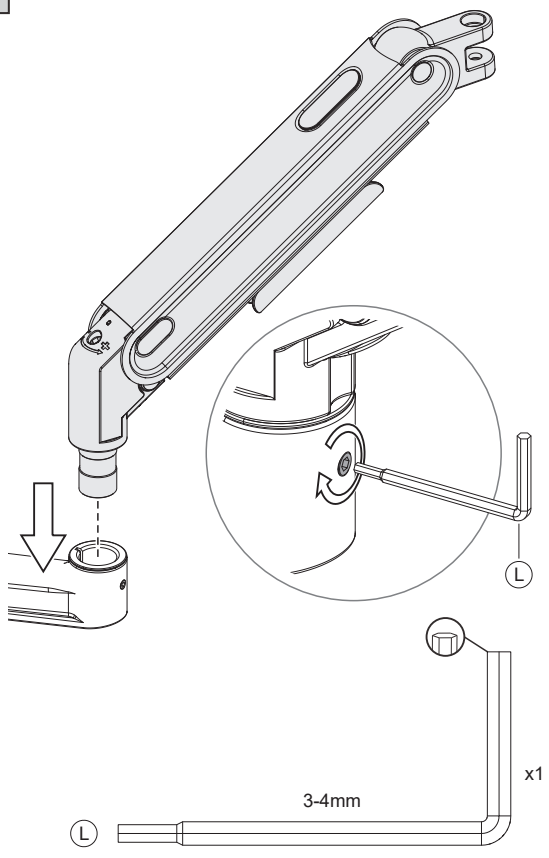


6

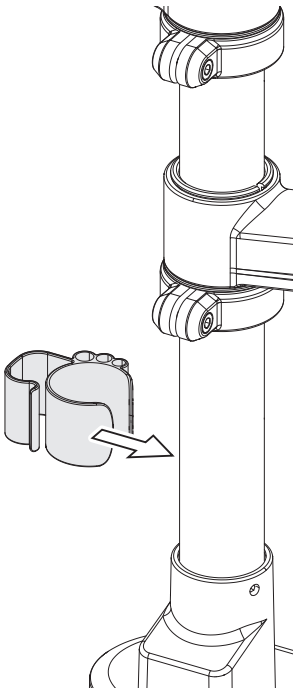


7

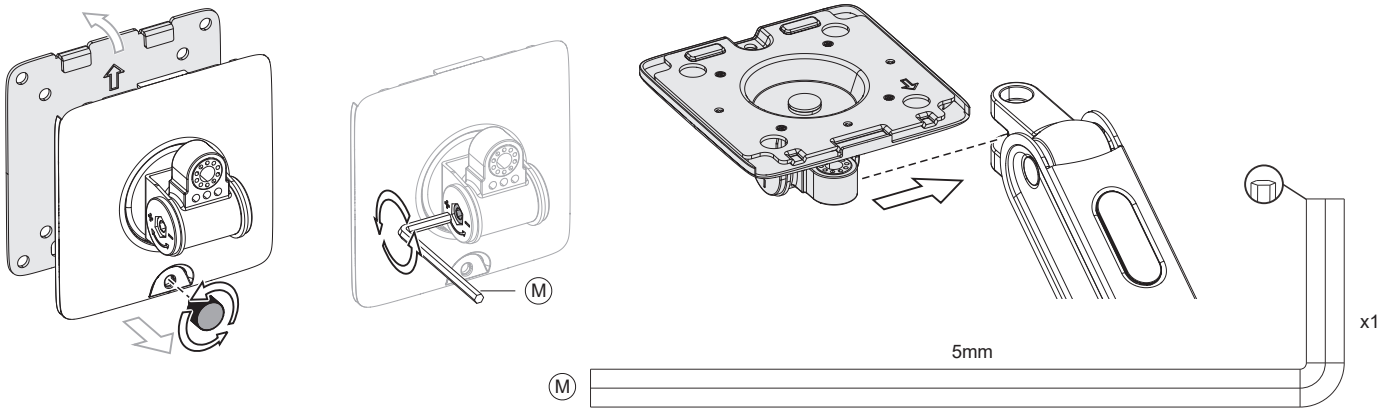


8

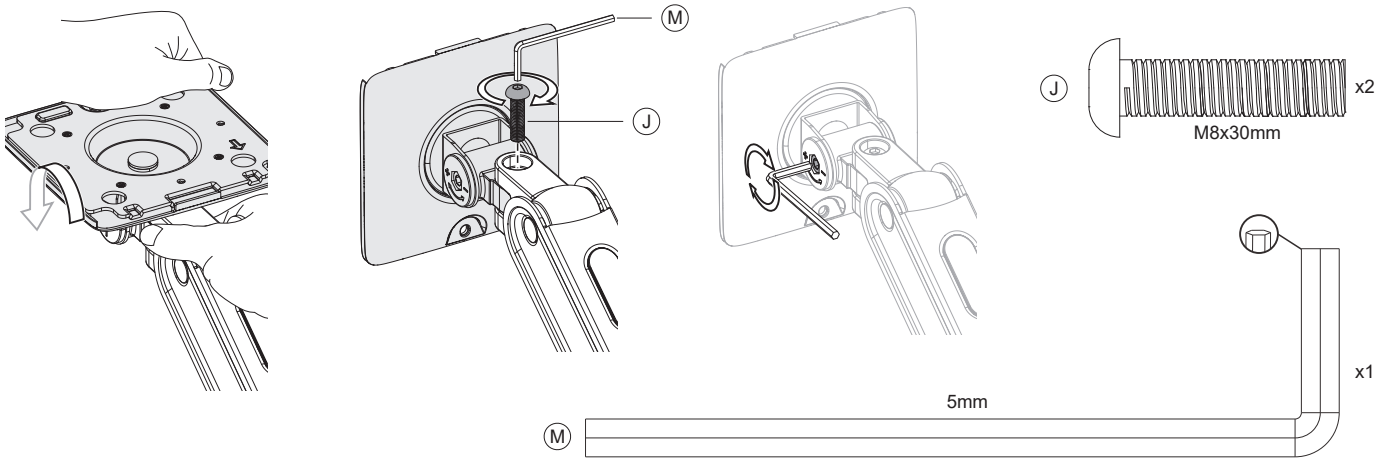

9

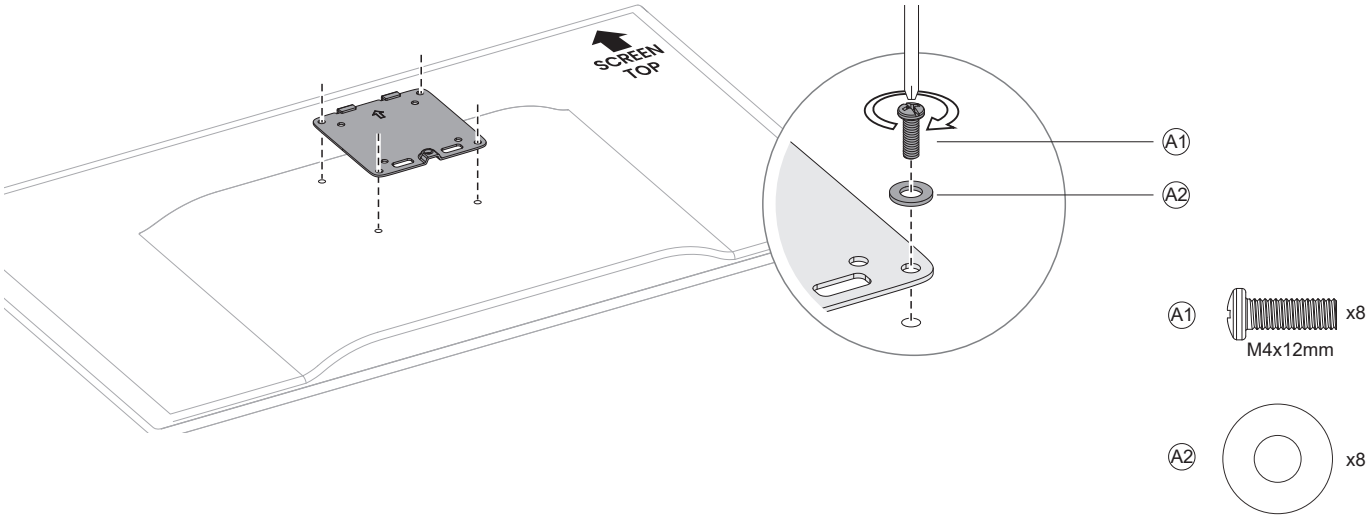

10

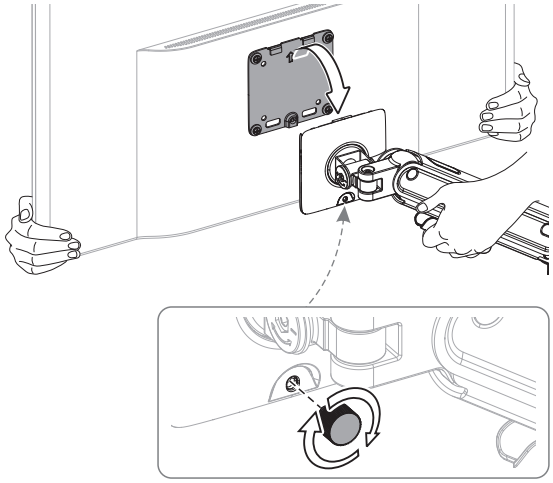

11

Tension adjustment requires 2 operators:
one holds the upper arm horizontally, the other adjusts the tension screw using a Hex wrench until the monitor stays in place when released.


⚠ WARNING


Keep hands away from moving joints during use.

Adjust the screw until the monitor can remain stable at any position - neither rising nor falling.
If the monitor **rises**, turn the screw toward **(-) direction** to decrease the tension.
If the monitor **drops**, turn the screw toward **(+) direction** to increase the tension.

⚠ CAUTION

DO NOT over-tighten or over-loosen the screw, as this may cause damage.

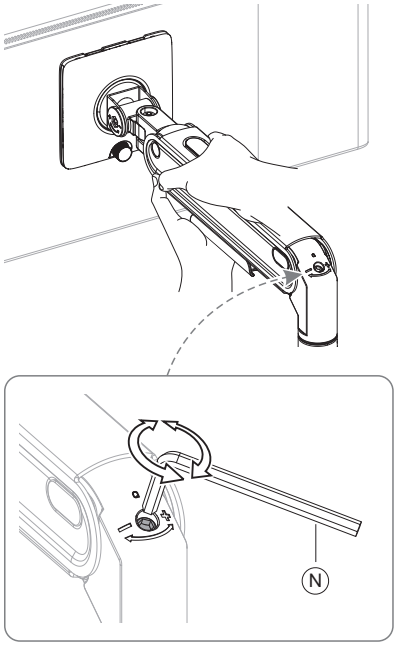

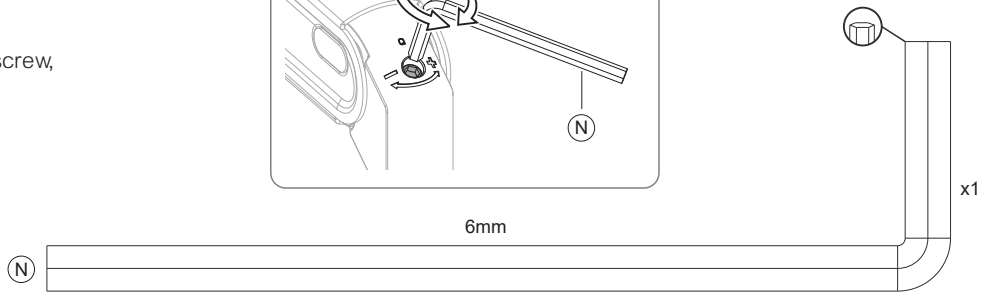

12

